


PacsAnalyzer and PACStationMgr considerations when installed on Win7 (32/64 bit) OS's.

When executing these tools over Ethernet, the PLC module info/fault tables will be collected, but the Ethernet section may show no data at all, this is NOT the expected outcome.

For example, ETM analysis sections shows no Ethernet data collected.

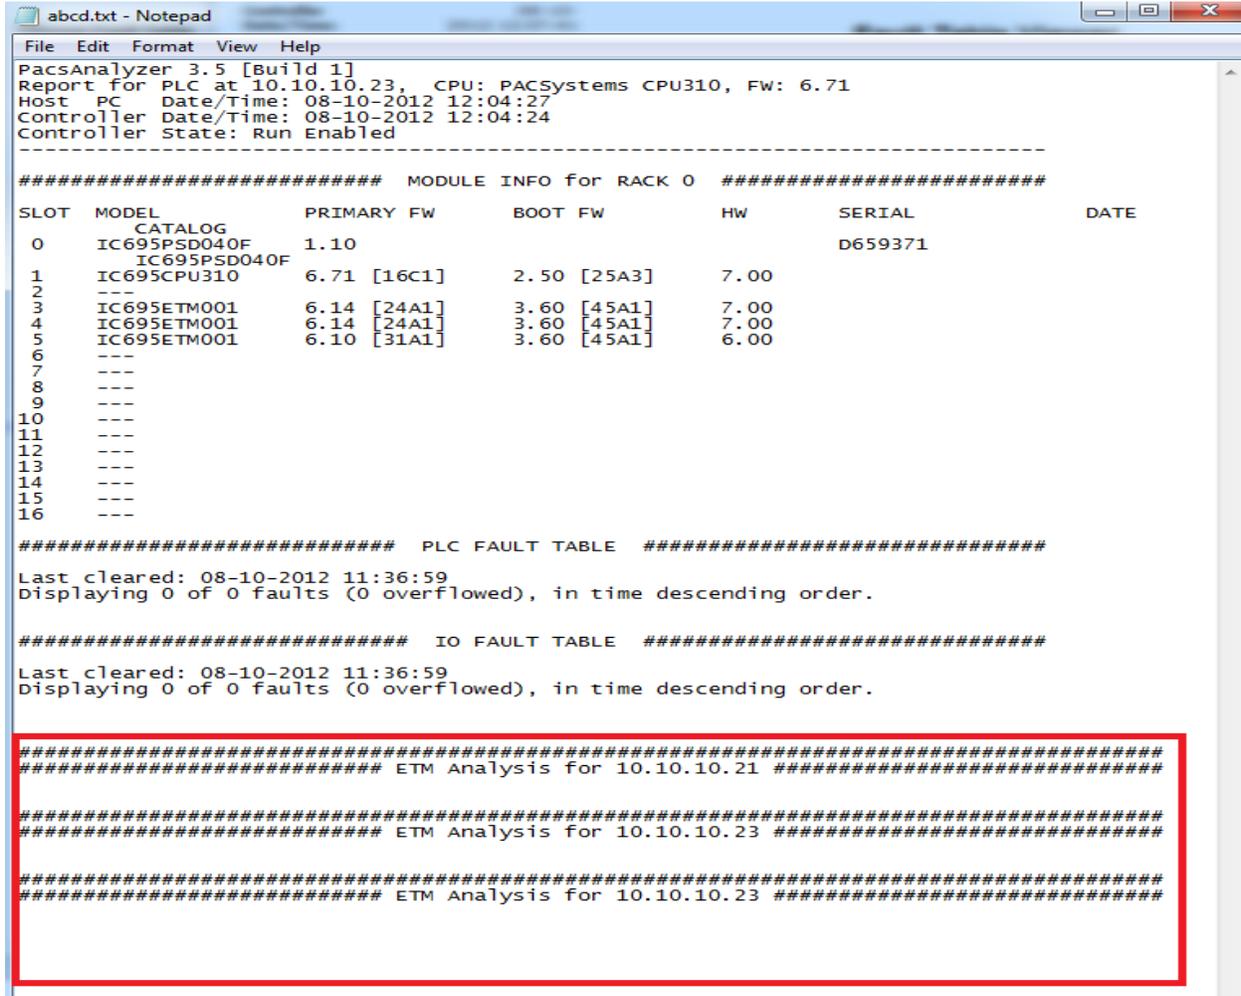

```
abcd.txt - Notepad
File Edit Format View Help
PacsAnalyzer 3.5 [Build 1]
Report for PLC at 10.10.10.23, CPU: PACSystems CPU310, Fw: 6.71
Host PC Date/Time: 08-10-2012 12:04:27
Controller Date/Time: 08-10-2012 12:04:24
Controller State: Run Enabled
-----
##### MODULE INFO for RACK 0 #####
SLOT  MODEL          CATALOG          PRIMARY FW      BOOT FW          HW          SERIAL          DATE
0      IC695PSD040F      IC695PSD040F     1.10
1      IC695CPU310       6.71 [16C1]      2.50 [25A3]     7.00
2      ---
3      IC695ETM001       6.14 [24A1]      3.60 [45A1]     7.00
4      IC695ETM001       6.14 [24A1]      3.60 [45A1]     7.00
5      IC695ETM001       6.10 [31A1]      3.60 [45A1]     6.00
6      ---
7      ---
8      ---
9      ---
10     ---
11     ---
12     ---
13     ---
14     ---
15     ---
16     ---


##### PLC FAULT TABLE #####
Last cleared: 08-10-2012 11:36:59
Displaying 0 of 0 faults (0 overflowed), in time descending order.

##### IO FAULT TABLE #####
Last cleared: 08-10-2012 11:36:59
Displaying 0 of 0 faults (0 overflowed), in time descending order.


##### ETM Analysis for 10.10.10.21 #####
##### ETM Analysis for 10.10.10.23 #####
##### ETM Analysis for 10.10.10.23 #####
```

Windows Firewall needs to be configured correctly to allow these tools to collect the Ethernet data from the PLC. Two options are available:


1. Go into windows control panel and turn Windows Firewall OFF.

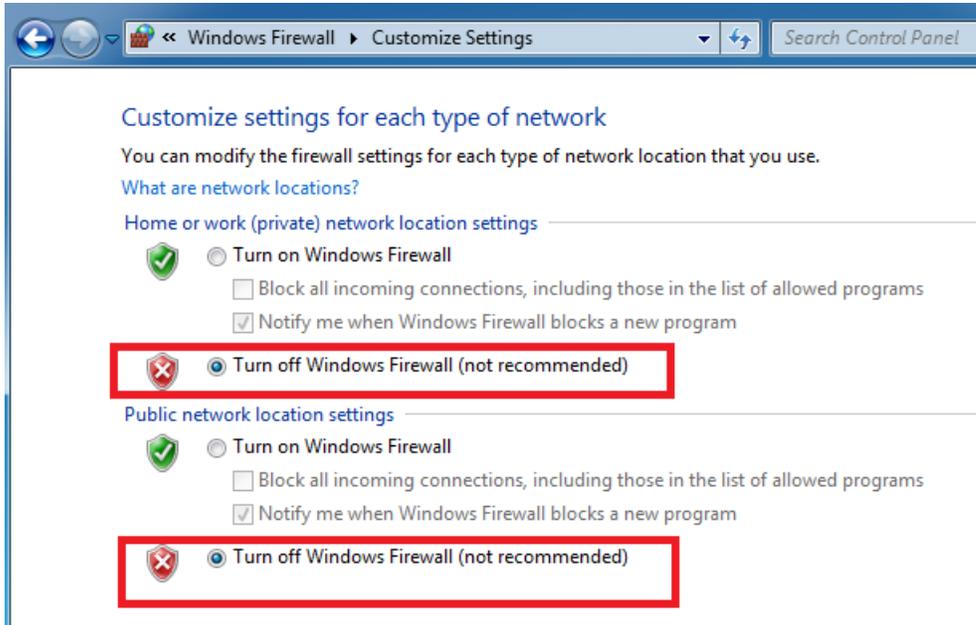


2. If Windows Firewall is to be left ON, add these tools to the “Windows Firewall > Allowed Programs” list.

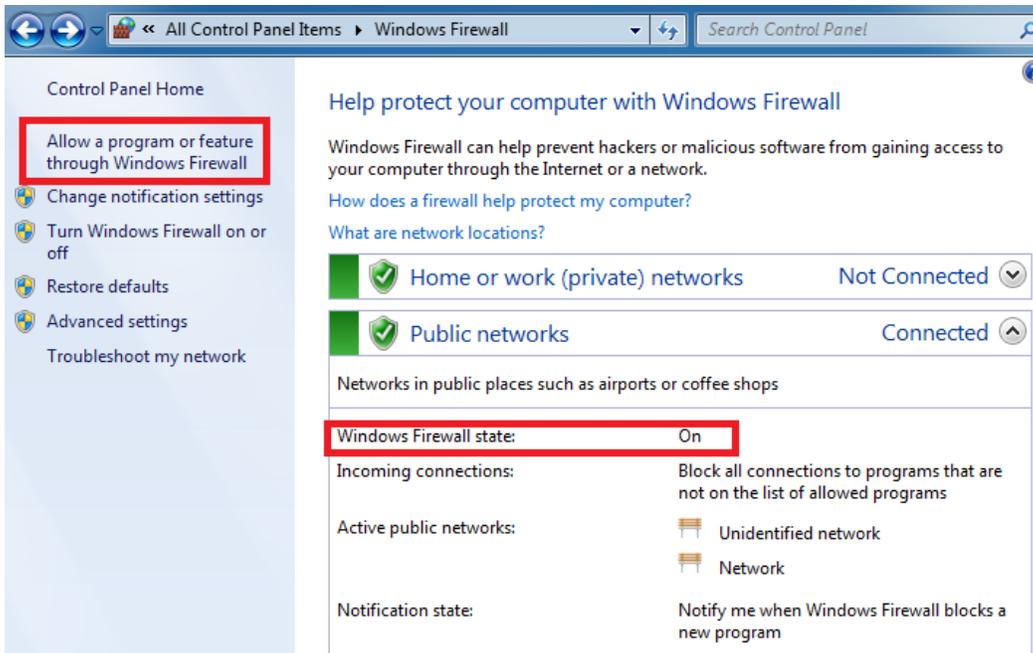


From the allowed programs list, select “allow another program”

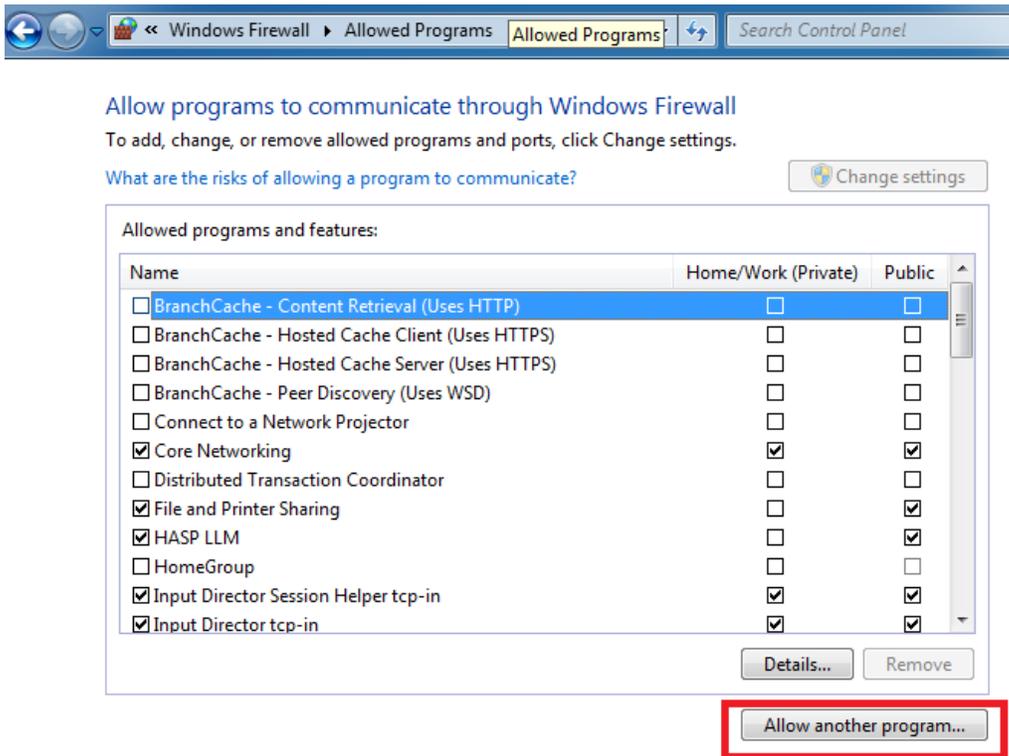


Select “Browse” and point to where you have these tools installed.

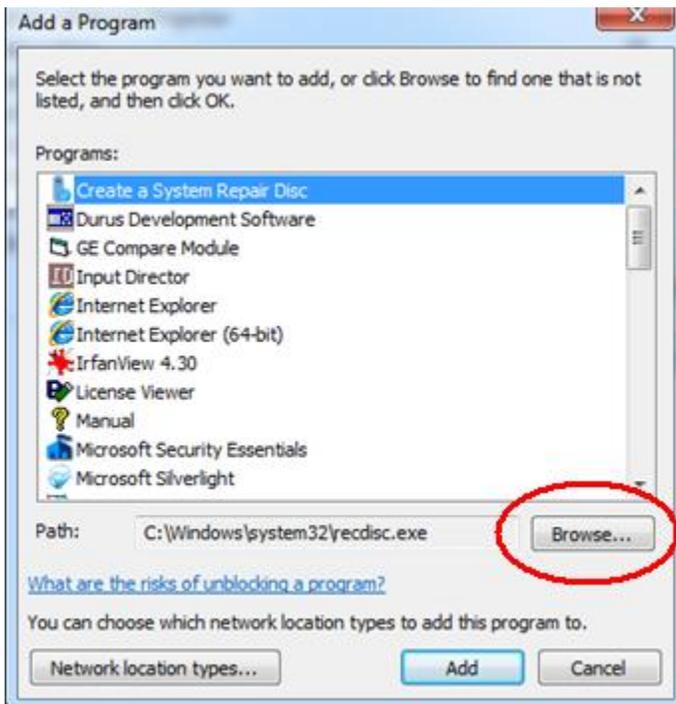

When Pacsanalyzer is added to the list, then select Add:

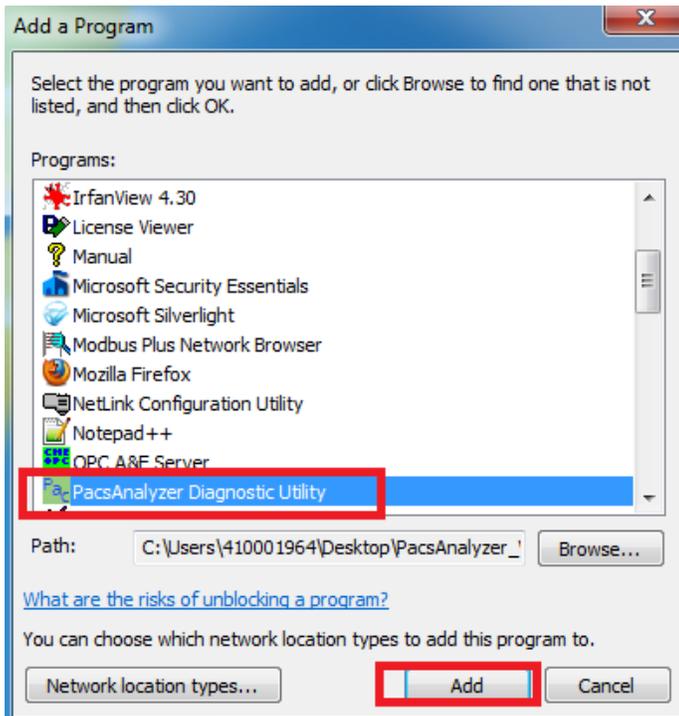

This is now added to the allowed list, check the boxes to the right for full access.

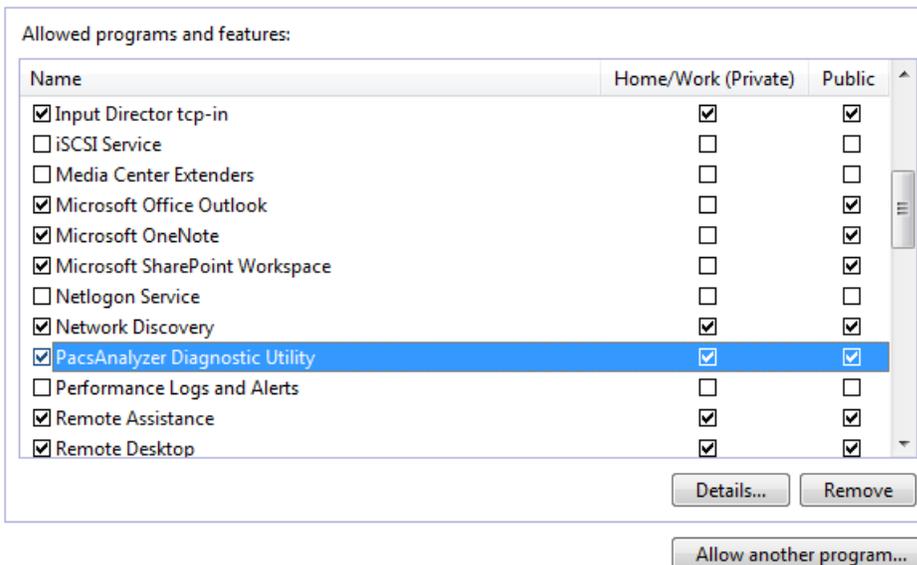

Select "Allow another program" again and add in PacStaMgr exe file.

End result, both programs added to the allow list.



These tools are now ready to be used on Windows 7 host machine.

3. Run the tool again and now the ETM analysis section should show valid data.

Here is an example of valid data:

```
#####  
##### ETM Analysis for 10.10.10.21 #####  
  
>node  
  
IC695 Peripheral Ethernet Interface  
Copyright (c) 2003-2005. All rights reserved.  
Version 6.14 (24A1) TCP/IP  
Version 3.60 (45A1) Loader  
Version 7.00 Hardware  
IP Address = 10.10.10.21          Subnet Mask = 255.255.255.0  
Gateway = 0.0.0.0  
MAC Address = <<0009910290E4>>  
SNTP Not Configured  
Station Manager Port:  
  Data Rate = 9600, Parity = NONE, Flow Control = NONE  
Source of Soft Switches: PLC Configuration  
Source of IP Address: Configuration  
Advanced User Parameters are modified; use "parm" command to display  
  
Jan 3, 2000  3:38:20.10  
Date/time not synchronized  
  
>log  
<<< Extended Exception Log >>>  
IC695 Peripheral Ethernet Interface version 6.14 (24A1)  
Log displayed 03-JAN-2000  03:38:21.0  
Log initialized using valid RAM information  
Log last cleared 01-JAN-2000  00:11:41.3
```